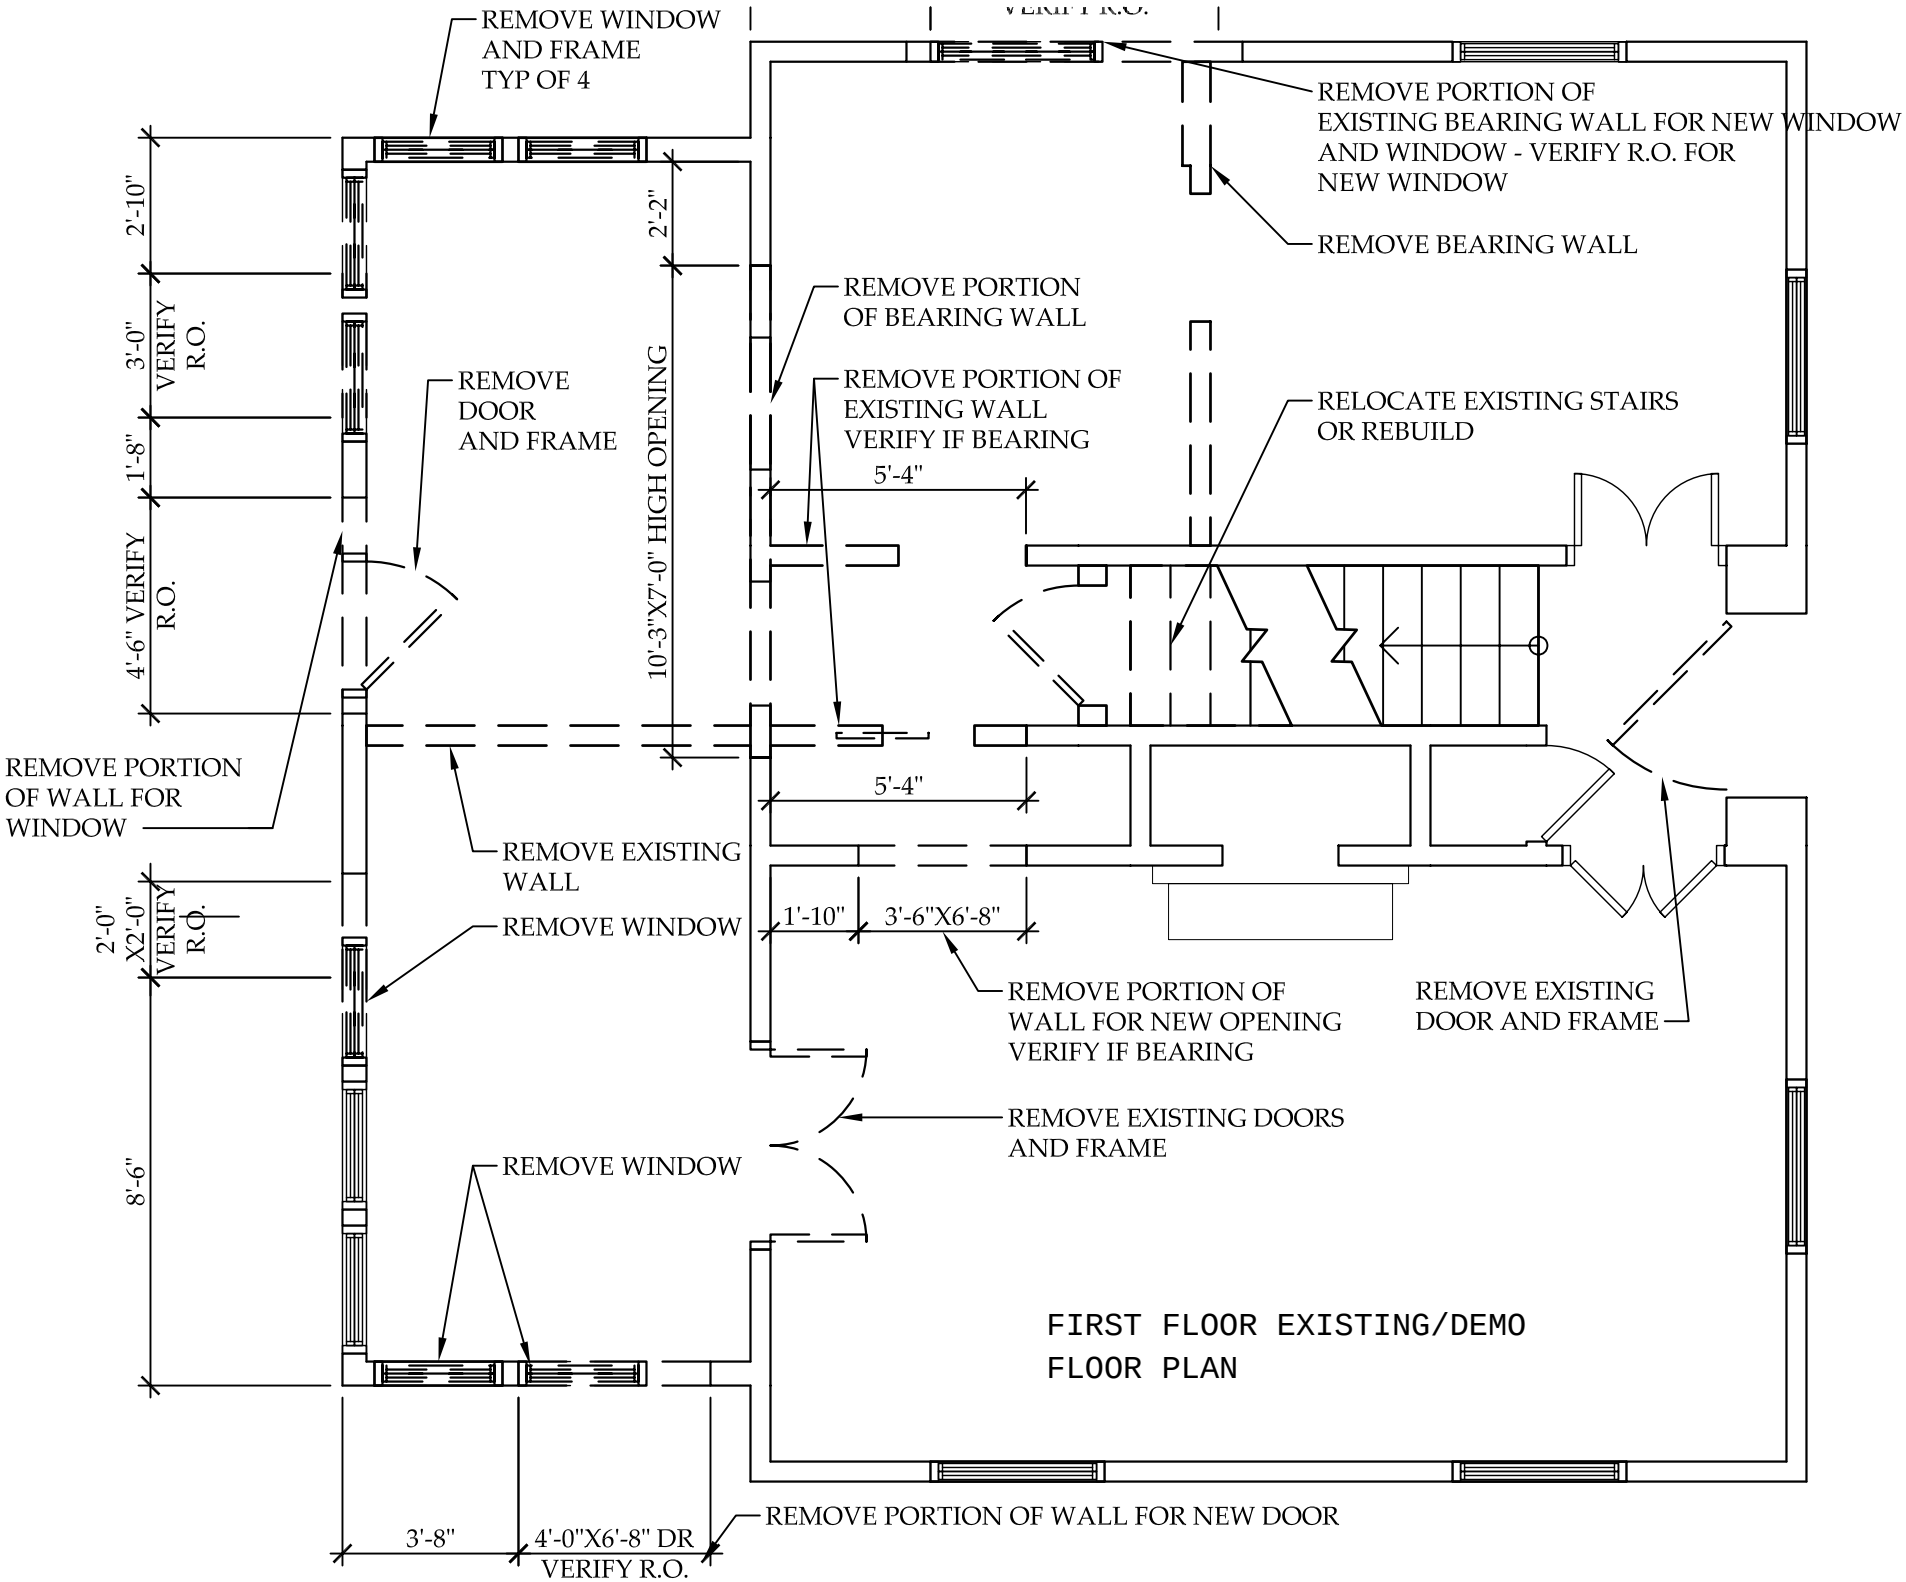
REMOVE WINDOW AND FRAME TYP OF 4
VERIFY R.O.
REMOVE PORTION OF EXISTING BEARING WALL FOR NEW WINDOW AND WINDOW - VERIFY R.O. FOR NEW WINDOW
REMOVE BEARING WALL
2'-10"
2'-2"
3'-0" VERIFY R.O.
1'-8"
4'-6" VERIFY R.O.
10'-3"X7'-0" HIGH OPENING
REMOVE PORTION OF BEARING WALL
REMOVE PORTION OF EXISTING WALL VERIFY IF BEARING
REMOVE DOOR AND FRAME
RELOCATE EXISTING STAIRS OR REBUILD
5'-4"
5'-4"
REMOVE PORTION OF WALL FOR WINDOW
REMOVE EXISTING WALL
2'-0" X2'-0" VERIFY R.O.
REMOVE WINDOW
1'-10"
3'-6"X6'-8"
REMOVE PORTION OF WALL FOR NEW OPENING VERIFY IF BEARING
REMOVE EXISTING DOOR AND FRAME
REMOVE EXISTING DOORS AND FRAME
8'-6"
REMOVE WINDOW
FIRST FLOOR EXISTING/DEMO FLOOR PLAN
REMOVE PORTION OF WALL FOR NEW DOOR
3'-8"
4'-0"X6'-8" DR VERIFY R.O.

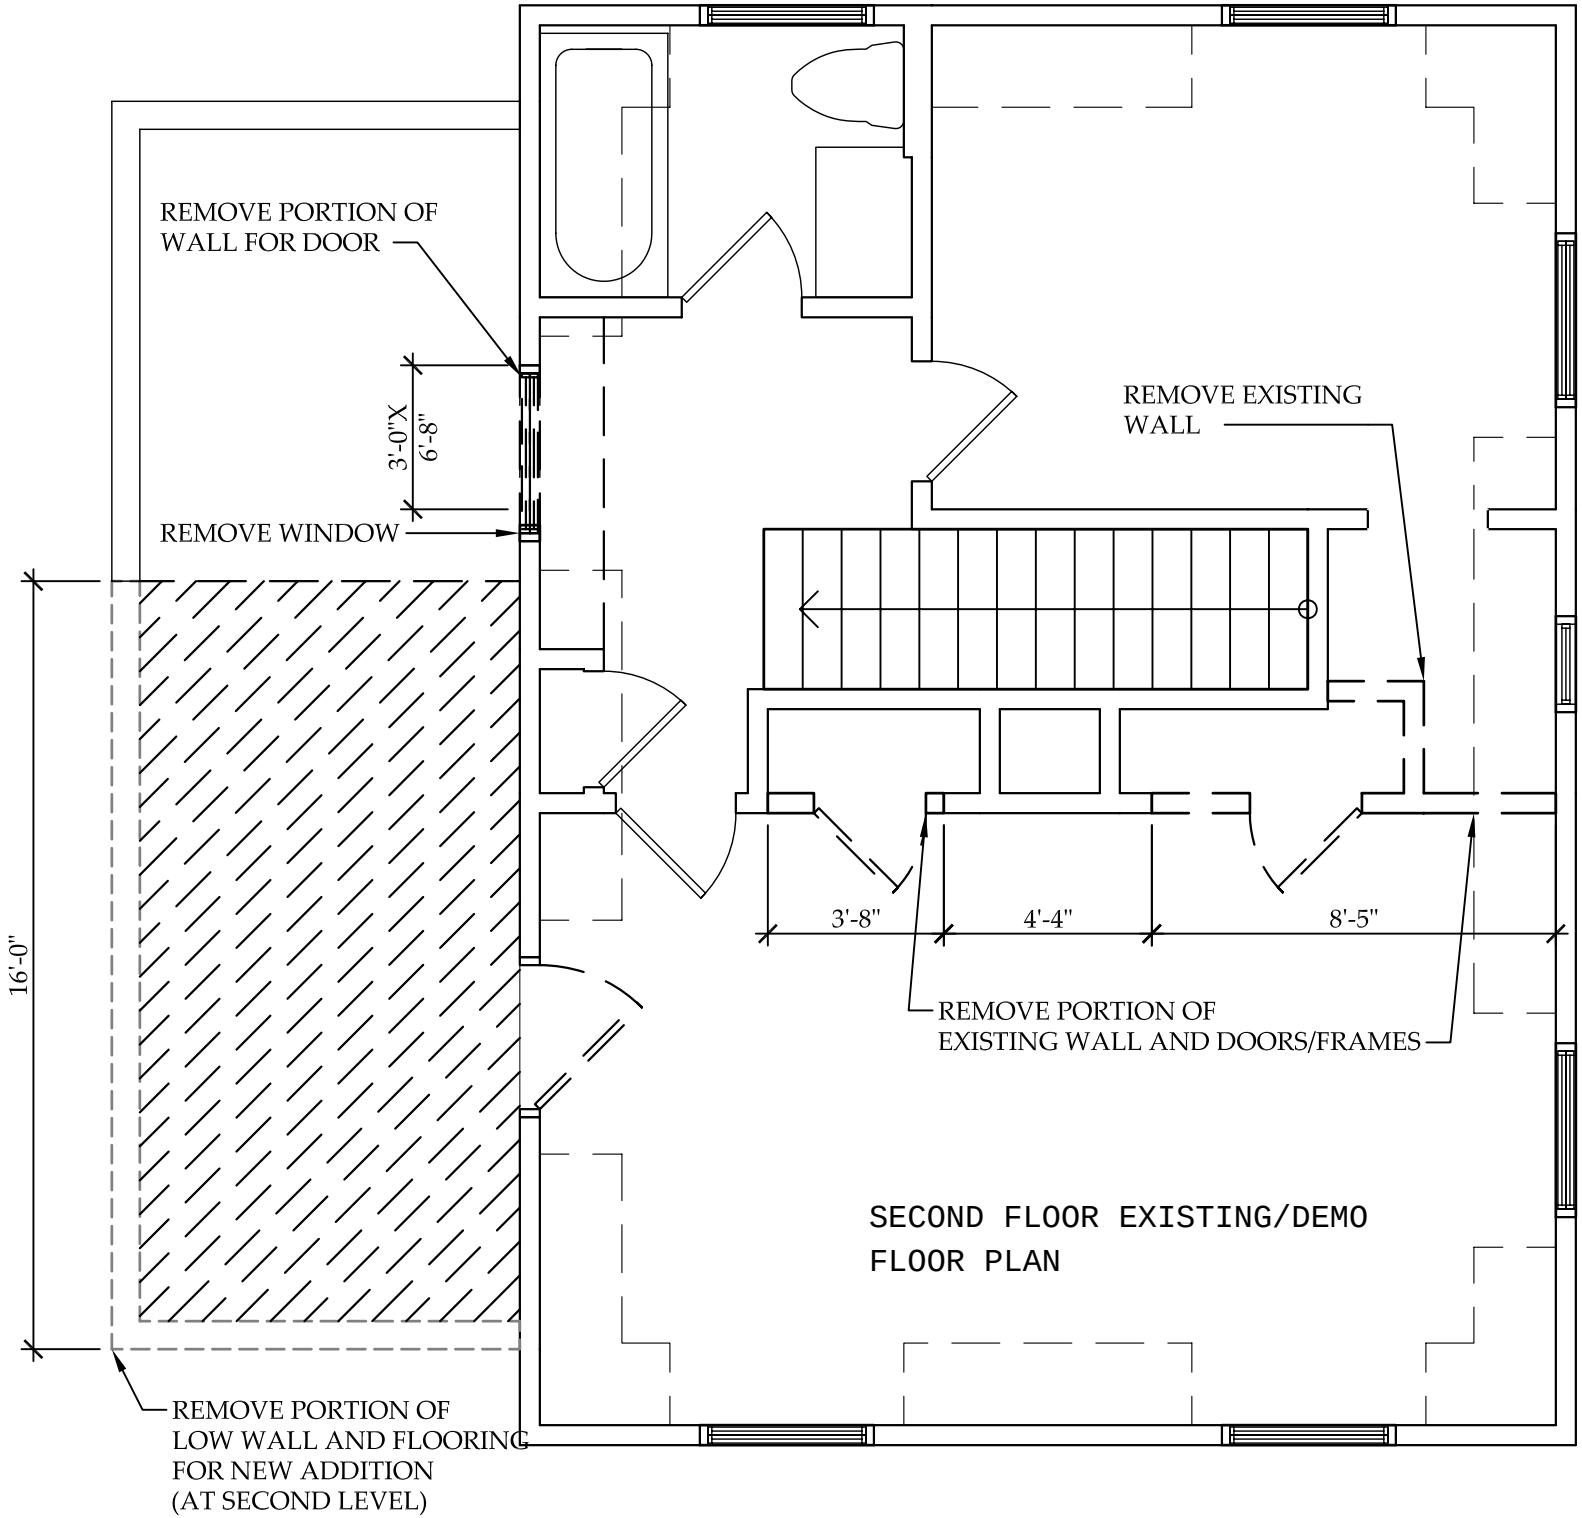
REMOVE PORTION OF
WALL FOR DOOR
3'-0"X
6'-8"
REMOVE WINDOW
REMOVE EXISTING
WALL
16'-0"
3'-8"
4'-4"
8'-5"
REMOVE PORTION OF
EXISTING WALL AND DOORS/FRAMES
SECOND FLOOR EXISTING/DEMO
FLOOR PLAN
REMOVE PORTION OF
LOW WALL AND FLOORING
FOR NEW ADDITION
(AT SECOND LEVEL)